 


WARRANTY: Universal Towers are warranted against detective material or workmanship and are subject to repair or to material replacement only if failure results from these factors within 1 year from purchase by user, this warranty does not extend to any of our products which have been subjected to misuse, neglect, accident, improper installation or application, nor shall it extend to units which have been repaired or substantially altered outside of our factory. This warranty is in lieu of all other warranties expressed or implied.


NOTE: LEGS SHOULD BE INSTALLED AS MARKED.



Base Model | Concrete Required | Hole Size

			28" x 28" x 4' 3' x 3' x 4' deep
			4' x 4' x 4' deep
		÷.	4 1/2' x 4 1/2' x 5' deep
B-30	6 Cu. Yd.	Ì	5' x 5' x 6' deep

All bases should be bolted to the bottom tower section of your particular configuration. This will ensure correct equilateral spread of the base. While concrete is setting up, the base can be leveled by using a carpenter's level on the upright of the section used to keep the base spread. Concrete should be allowed set up for 3 or 4 days before erecting the remainder of the tower. **NOTE: All bases should be put in amount of concrete recommended**.

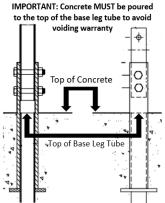

Visit UniversalTowers.com For More Detailed Installation Drawings

CAUTION: DO NOT VOID YOUR WARRANTY Aluminum Tower section should NEVER be placed directly in concrete!! Corrosive effects of cement will DESTROY aluminum tower sections. Use only Universal Bases as shown. Tower sections also require drainage to minimize the possibility of freezing and splitting. Universal bases allow the tower to drain properly and alleviate the possibility of damage. Use of a Universal Tower without the proper base **VOIDS ALL WARRANTIES**.